

Ankle Activator Instruction Sheet

- 1) Take your Becker Double Action Ankle Joint and remove the alan screw, spring, and ball. You can discard the alan screw. You need to keep the spring and ball.

- 2) Cut $\frac{1}{4}$ inch off of your spring, to allow for the diameter of the ball.

- 3) Reinstall the Activator with the spring back into the Becker Double Action Ankle Joint.

If you have any questions please contact us toll free at 1-866-663-3970.